


## **Assembly instructions**Wing shutters with installation frame



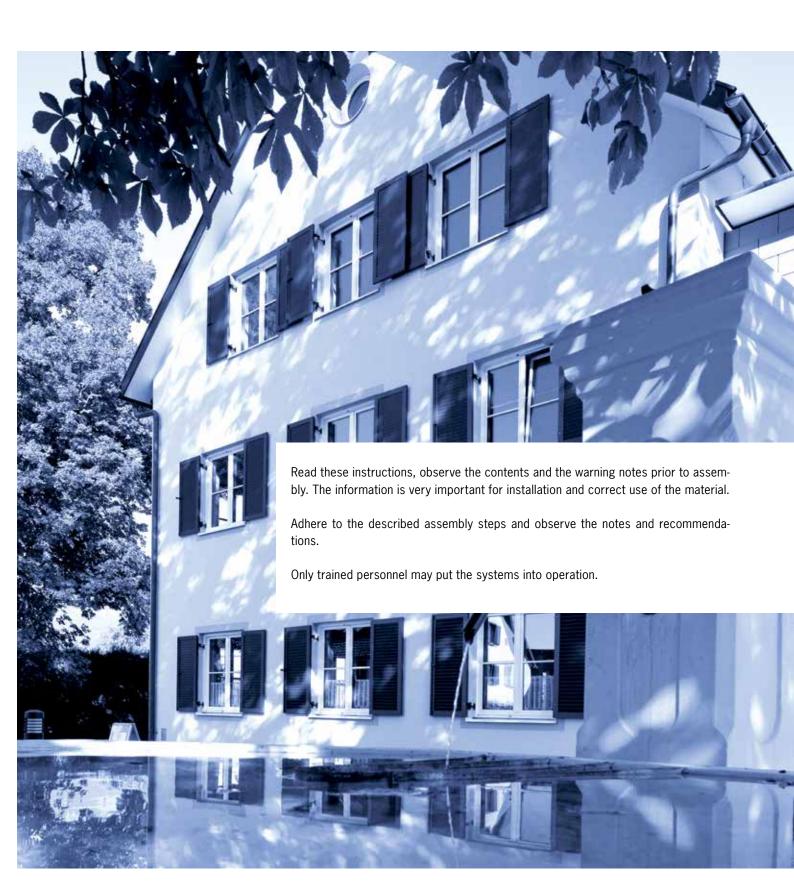

### **Contents**

			Page
1.	Notes	s regarding these instructions	
	1.1	Validity of this manual	3
	1.2	•	
	1.3	Used symbols	3
	1.4	Abbreviations	3
2.	Secu	rity	
	2.1	Safety and Warnings	4
		·	
3.	Prod	uct description	
	3.1	Exploded assembly drawing	5
	3.2	Marking	5
4.	Mour		
	4.1	Preparation for mounting	6
	4.2	Installation tolerances	6
	4.3	Installation in an elevated area	6
	4.4		
	4.5		
	4.6	Installation of the window shutters	
	4.7	Installation with the rod lock at the bottom	
	4.8	Installation of the shutter retention elements	
	4.9	Functional check	9 – 10
5.	Troul	bleshooting table	
	5.1	Trouble-shooting	11
6.	Dispo	osal	



### 1. Notes regarding these instructions

These instructions is meant for trained technicians with good skills in assembly technology. Only qualified technical personnel with the respective assembly experience may install window shutters

### 1.1 Validity of this manual

The wing shutters have been approved for export and use in Austria.

### 1.2 CE marking

Griesser AST GmbH hereby declare that the external window shutters conform to the basic requirements and other relevant specifications contained in the EU standards.

This is documented by the CE marking.

### 1.3 Used symbols

Side, direction, design left

Side, direction, design right

營

Outside



Movement to be carried out



Movement, direction



Movement, direction



Repeat step various times



Manual operation



Visual inspection



Information



Note

### 1.4 Abbreviations

hl Opening height

**bl** Opening width

hff Finished sash height

bff Finished sash width



### 2. Security

The safety and warning notes make a distinction between personal injury and damage to property. The signal word "Danger" is used to indicate the risk of personal injury, while the signal word "Caution" is used to indicate the risk of damage to property.

### 2.1 Safety and Warnings



Immediate danger to life and limb!



Immediate risk of product and environment!



### **Useful information and notes**

- Observe the applicable accident prevention regulations.
- Close off a sufficient space around the assembly area.
- Check any available scaffolds and installations in terms of their safety.
- Observe the regulations applicable to dowel and fastening material.
- Always work with undamaged and suitable tools.
- Keep plastic films, packaging material as well as small parts away from children risk of suffocation!

### 2.2 Intended use

Warranty claims are forfeited if damage is due to the non-compliance with the brochure or the attached document. GRIESSER AST GmbH does not accept liability for consequential damage.

GRIESSER AST GmbH does not accept liability for damage caused by incorrect installation.

Except for the actions described in the operating manual and the assembly instructions, the product may not be altered in any way.



### 3. Product description

### 3.1 Wing shutters Installation frame (external view)



### 3.2 Marking



Depending on the quantity, the components for the same window shutter can be packed in several cartons.



### 4. Mounting

### 4.1 Preparation for mounting

### Checking the installation dimensions

The main dimensions must be checked according to the dimension sheet prior to installation.

The installation tolerances according to the Technical Datasheet must be adhered to.

### • Orientation at the installation site

Aids (table, crane, ladder, etc.)

### Selection of tools and mountings

Check material

### Distribute material (how and where)

Dimension sheets, manufacturing notes Assembly instructions

### Study documents

Installation dimension check (width x height) Sketches, drawings



Mind assembly view

### 4.2 Installation tolerances

Deviations from the perpendicular +/- 2mm/m

### 4.3 Installation in an elevated area

### Fall protection

Workers run the risk of falling when working at elevated heights. Suitable anti-fall guards must be used.

### 4.4 Fasteners

In the installed condition, the wing shutter only meets the requirements of the given wind class when


- the clamps are installed taking the anchor plug extraction force into consideration.
- the processing guidelines of the used dowel pins were observed during assembly.



4.5	Montage of the installation frame (A	Assembly view from the outside)
1.	Set the installation frame into the screen frame / the window soffit.	
2.	Draw the positions of the pre-drilled holes inthe screen frame / the installation frame onto the soffit.	
3.	Remove the installation frame and drill holes at the points marked. Insert fastening means	



4. Set the installation frame into the screen frame / the soffit and fix in place. Attach the cover caps.

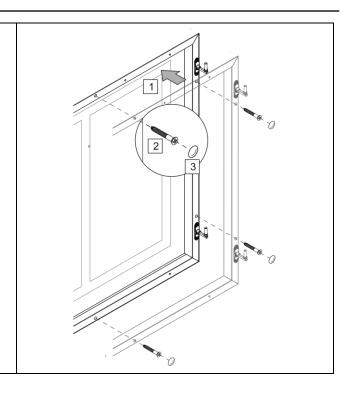


# 1. Set the window shutters in place and check that they function properly. 1. Set the window shutters in place and check that they function properly.

8



## 4.7 Installation of the shutter retention elements 1. Install the shutter retention element in the middle (at least 180 mm from the band pivot axes). Select the screw-in depth so that the wings, when open, are parallel to the facade. Setting the retention element is done appropriate to the surface. (refer to 4.4 Fasteners)

4.8	Installation with the rod lock at the bottom (3-sided frame)	
1.	Mount the locking pin plate at the bottom.  Check the functioning of the lock.	
	Attention	Observe the dimensions!

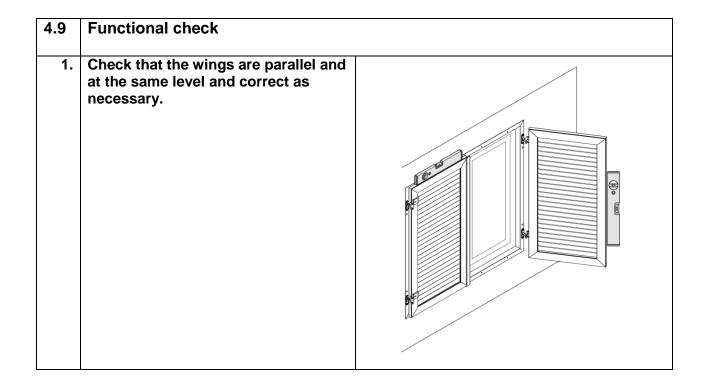

9



2.	Correct the band position as necessary, adjust using the set screw.	
3.	Pull the insect screen roller blind down and then release it.	
	The roller blind must come to a stop.	
4.	Pull down the insect screen roller blind once again and push it upwards.	
	The roller blind moves to the top.	

5.	Troubleshooting table				
5.1	Trouble-shooting				
	Fault	Cause	Correction		
	Poor closing of the window roller shutters	Bands not, or incorrectly, adjusted	Correct the band position		
	Window roller shutters rattle	frame seal is missing / faulty	Check fastener		
			Insert or replace seal		

6.	Disposal
	Wing shutters must be disposed of in an environmentally friendly manner at the end of the product's service life!





Griesser AST GmbH Gewerbestrasse 17 6710 Nenzing Österreich / Autriche / Austria www.griessergroup.com